






ROAM





QUICK START GUIDE

IMPORTANT: Before first use, charge for ~6 hours.

Power/Charging

- 1 Connect the CHARGING cable into the speaker's CHARGING port.  DC IN
- 2 Connect the CHARGING cable to an external power source. 
- Press the POWER button to turn ON. (Press) 
 - The speaker will make visual LED confirmation. Power indicator will light up for ~4 seconds.  POWER HI
- Press and hold the POWER button ~2 seconds to turn OFF. (Press) 

Bluetooth Pairing

- 1 Place your mobile device within 3 feet of the speaker. 
 - Make sure Bluetooth® is enabled on your mobile device. 
- 2 Press the BLUETOOTH® button to set the speaker to Bluetooth® mode. (Press) 
- 3 Select "Monster ROAM" on your mobile device to pair with the speaker. 

~30 feet max connection range after paired. Moving devices outside this range may cause disruption or signal loss.



IP67 Dustproof & Waterproof

- The speaker is Ingress Protection (IP) rated for full protection against dust and protection against water to a maximum depth of 1 meter (~3 feet) for 30 minutes.



Floats Upright

- The ROAM is designed to always float with the speaker-side facing up. Even when briefly submerged, the speaker will naturally float to the surface and turn to face right side up.



The input/output back panel must be sealed before immersing the speaker in water.

Make sure the twist cap is firmly in place and in the "closed" position. Leaving the cap detached or in the "open" position may allow water to seep in and permanently damage the speaker. DO NOT immerse in water while plugged into a power source.

