



# ROCKIN' ROLLER<sup>®</sup> 3


## PORTABLE INDOOR / OUTDOOR WIRELESS SPEAKER

### Quick Start Guide

For complete operational guidelines, please refer to your user manual.

#### Basic Set up

#### Connect Power & Charge

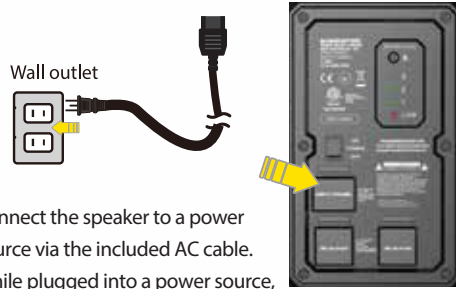

- Connect the speaker to a power source via the included AC cable.
- While plugged into a power source, speaker will charge automatically.

**BEFORE FIRST USE:** Charge for approx. 6 hours. When fully charged, all three (3) GREEN LED indicators will turn on. While charging, the RED LED indicator will turn on. When battery is low, the RED LED indicator will flash.

#### Manual Bluetooth Pairing



- Press and hold the BLUETOOTH button on the speaker until BLUE LED indicator starts flashing.
- Make sure Bluetooth is activated on your device and is within 3 feet of the speaker.
- Select the device "Monster RR3".
- When paired, the BLUE LED indicator will stop flashing and remain steady.

#### NOAA Radio



- Press the SOURCE button until the NOAA source is selected. "NO-1" will appear on the screen.
- Press and hold the ARROW keys to find a station with the strongest reception.

#### True Wireless Stereo (TWS)

#### TWS Two-Speaker Connection



- Make sure the speaker is in Bluetooth mode and connect to a device.
- Press the TWS button to activate the speaker's True Wireless Stereo (RED LED indicator will flash in TWS mode)
- On a second speaker (NOT connected to a Bluetooth device), press the TWS button.
- When speakers connect, the RED LED indicator will stop flashing and remain on.
- To disconnect a speaker, press the TWS button.

